

Telephone:
Fax:
VAT Registration No.:

Name:		Manufacturer:	Volvo
Address:		Model:	
		Year:	1995
		Registration:	
Tel - Private:		Mileage:	
Tel - Business:		Job number:	

NOTE: Models available with 3 different remote alarm systems.

Type I

System operation

- Activate alarm: Ensure LED on top of fascia illuminates for 5 seconds and then flashes.
- Without double locking: Pressing lock button activates alarm and central locking.
- With double locking: Pressing remote control lock button once, only activates central locking. Pressing remote control lock button twice within 3 seconds activates double locking system and alarm.

Fig. 1

Programming

When

- Remote control added or replaced.
- System malfunction.

How

- Obtain all remote controls.
- Switch ignition on and off 4 times within 10 seconds.
- Switch ignition ON.
- Within 30 seconds press either the lock or unlock button on each remote control.
- Switch ignition OFF.
- Check each remote control works correctly.
- A maximum of 3 remote controls can be programmed.

Type II

System operation

- Location of system status panel on RH 'A' post.
- Without double locking: Pressing lock button activates alarm and central locking Fig. 2 [1].
- With double locking: Pressing remote control lock button once, only activates central locking. Pressing remote control lock button twice within 3 seconds activates double locking system and alarm.
- If vehicle unlocked and doors or boot/tailgate not opened within 2 minutes, system is reactivated.

Fig. 2

Manufacturer: Volvo	Model: 850 2,5 20V	© Autodata Limited 2004
Engine code: B5254S	Output: 125 (170) 6100	2006-10-17
Tuned for: R-Cat	Year: 1995-97	V5 373- /Autodata

Programming

When

- Remote control added or replaced.
- System malfunction.

How

- Ensure doors, boot and bonnet are closed and unlocked.
- Switch ignition ON.
- Press the function button [Fig. 3](#) [1] on the status panel until the status LEDs [2] and indicator LED '1' [3] are lit.
- Release function button.
- Using the function button [Fig. 3](#) [1] advance to an unoccupied status location, LED illuminated [2].

NOTE: If all status locations are occupied, LED flashing. An existing code will have to be overwritten.

- Press remote control button [Fig. 2](#) [1] within 10 seconds to send code to status panel.
- Check status LEDs [Fig. 3](#) [2] and indicator LEDs [4] flash briefly to indicate correct programming.
- A maximum of 3 codes and 6 remote controls can be programmed.

NOTE: Both remote controls supplied as a set have the same code. [Fig. 3](#)

Type III

System operation

- System LED located on top of the instrument panel.
- Without double locking: Press lock/unlock button to activate alarm, indicator lamps flash once [Fig. 4](#) [1].
- With double locking: Press lock/unlock button to activate alarm and double locking system, indicator lamps flash twice [Fig. 4](#) [1].
- If vehicle unlocked and doors or boot/tailgate not opened within 2 minutes, system is reactivated.

[Fig. 4](#)

Programming

When

- Remote control added or replaced.
- System malfunction.

How

- Obtain all remote controls.
- Switch ignition on and off 4 times within 10 seconds.
- Switch ignition ON.
- System LED should flash.
- Within 15 seconds press the lock/unlock button on one of the remote controls.
- Check LED illuminates for 2 seconds and then flashes for 10 seconds to indicate correct programming.
- Program the following remote control within the 10 seconds using the same method.
- Repeat above procedure to program remaining remote controls.
- Switch ignition OFF.
- Check each remote control works correctly.
- Remote controls can also be programmed using diagnostic equipment.
- A maximum of 4 remote controls can be programmed.

